


REMOTE CABLE TESTER

Operation Instructions:

1. Connect one side of the plug to the Main Tester Unit and the other side of plug to Remote Unit.
(Remote Unit is separatable from the Main Unit for remote testing)
2. Press the Push Button on tester.
3. Read the status shown on LED displays.

Following connectors with cables are applicable for testings.

- 1) RJ 45 plugs - Shielding (STP) or Non-Shielding (UTP).
- 2) RJ 11 plugs - 6P telephone plug.
- 3) USB plug - USB/ A type to USB/ B type.
- 4) BNC - To test the terminator value.

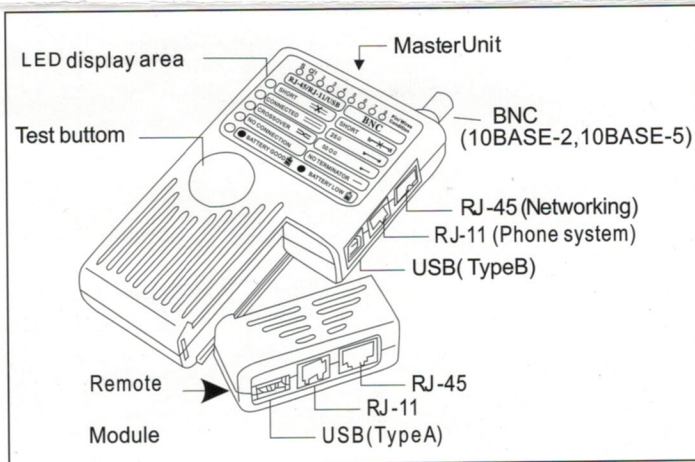

Features:

- Can test RJ11/RJ45/USB.
- Fast speed in testing.
- BNC terminator 25 Ohm / 50 Ohm..indications.
- Straight or crossover indication.
- Battery good or Battery low indication.
- LED clear indications
- RJ11 / RJ45 are equipped with 50u" gold plating.
- Fast reaction during test process.
- Max. cable length : 1000 ft.

Specifications:

- open / short wire testing.
- 9V Alkaline battery powered.
- Clear reading for wire status.